

Specials

Tailor made solutions that make a difference



EWAC

INDUSTRIAL




Engineered under pressure

www.ewacindustrial.nl



Force multiplier

For opening and closing the caps of Mo-99 containing bottles. Inside the hot cell, it is hardly possible to apply the substantial force needed to open and close the caps, due to the limited strength that the operator can apply through the manipulator arms.

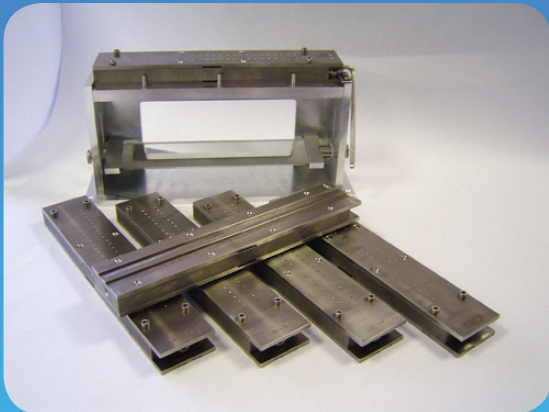

Cable positioning blocks

Used for accurate positioning of stainless steel cables inside a laser welding cell. With these blocks, 52 cable ends can be melted using a laser beam, after which the ends are fitted with a Ir-192 source. The cables will then be used in brachytherapy, a localized irradiation method.



Rotating lead shield

For radiation shielding around a waste vessel underneath a hot cell. The shielding can be rotated such that the waste vessel can easily be removed.

EWAC Industrial

Dulleweg 18
1721 CT Langedijk
The Netherlands

T: +31 226 313 457
industrial@ewac.nl
www.ewacindustrial.nl

EWAC

INDUSTRIAL

Engineered under pressure

